

Note: SwiftClean pen cleaner User's Manual



- This product is intended for use as a cleaner for optical connector or adaptor.
- Please do no use for other purpose



<u>Menu</u>

- 1. Names and Descriptions of Parts
- 2. Method of Use
- 3. Compatible Connectors

Product Enquiry

 $\textbf{Email:} \underline{info@infinitecable system.com}$

Address: 東京都新宿区赤城下町 45 B-9

www. in finite cable system. com

1. Names and Descriptions of Parts



• The remaining usage can be shown in the window.

• Avoid storing in locations with high humidity and high temperature

Weight: 10g, thickness: 13mmCleaning times: ~1000times

2. Compatible Connectors


| Model No. | Features | Connector/adaptor type |
|-----------|------------------------------|------------------------|
| INFE312S | Connector + Adaptor cleaning | 2.5 μm |
| INFE312L | Connector + Adaptor cleaning | 1.25 μm |

3. Method of use

To clean the adaptor/ bulkhead side:



1. Remove the cap

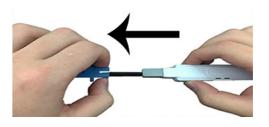


2. Push the cleaner to the adaptor/bulkhead

To clean the connector side:




1. Plug in the cap

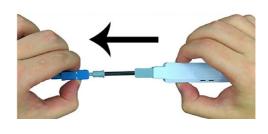

2. Push the cleaner to the connector



Before Use

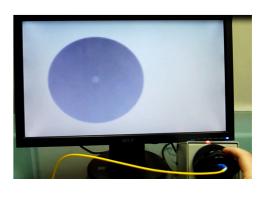

After Use